

POLOHOVIS ROZVADĚČE R32

1	2	3	4	5	6	7	8	9	10	11	12
SPÍNÍ KAM VYTAČ			SPÍNÍ ROZBÍJACÍ KONTAKT VYTAČ					KONTAKT VYTAČ			
<div><div></div><div></div><div></div></div>								<div><div></div><div></div><div></div></div>			
V1								J1			

13	14	15	16	17	18	19	20	21	22	23	24
CD54/25D			LESNÍK SYNČ	LESNÍK SYNČ	LESNÍK SYNČ	LESNÍK SYNČ	LESNÍK SYNČ	LESNÍK SYNČ			
<div><div></div><div></div></div>			<div><div></div></div>	<div><div></div></div>	<div><div></div></div>	<div><div></div></div>	<div><div></div></div>	<div><div></div></div>	<div><div></div></div>		
26AA/P/0,03A FA3			J5	J6	J7	J8	J9	J10			

25	26	27	28	29	30	31	32	33	34	35	36
CD54/25D			LESNÍK SYNČ	LESNÍK SYNČ	LESNÍK SYNČ						
<div><div></div><div></div></div>			<div><div></div></div>	<div><div></div></div>	<div><div></div></div>						
26AA/P/0,03A FA4			J11	J12	J13						

37	38	39	40	41	42	43	44	45	46	47	48
ABD07/610			ABD07/610			LESNÍK SYNČ					
<div><div></div><div></div></div>			<div><div></div><div></div></div>			<div><div></div></div>					
10A/0,03A/6 FA1-J3			10A/0,03A/6 FA2-J4			J2					

ROZVODNICE POD OMÍTKU: VOLTA VU48NC 4x12+1 TE, IP30, HAGER
Rozvodnici označit štítkem blesku v trojúhelníkovém poli a doplnit popisem přístrojů.